



ATTACHMENT & LOCATION GUIDE



Panel Spacing

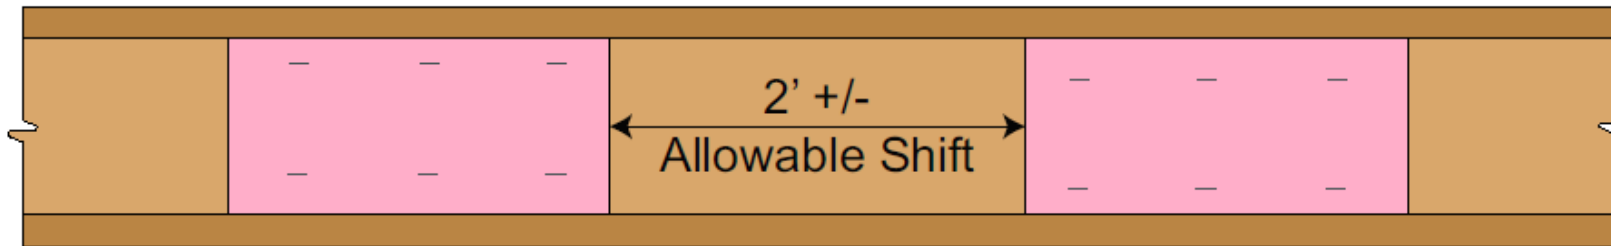

Allowable Panel Shifting

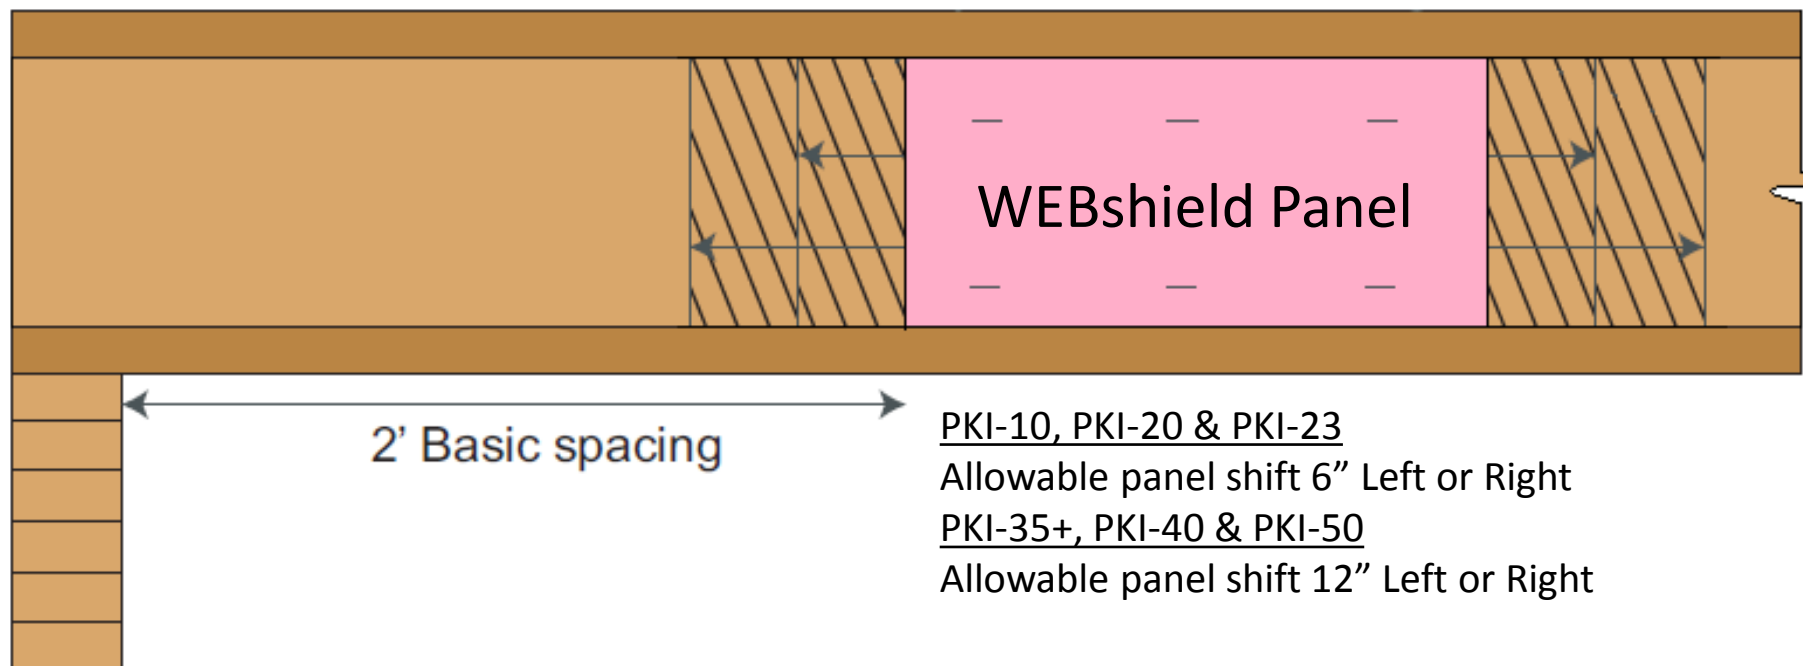

Panel Attachment

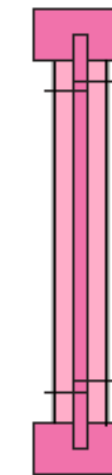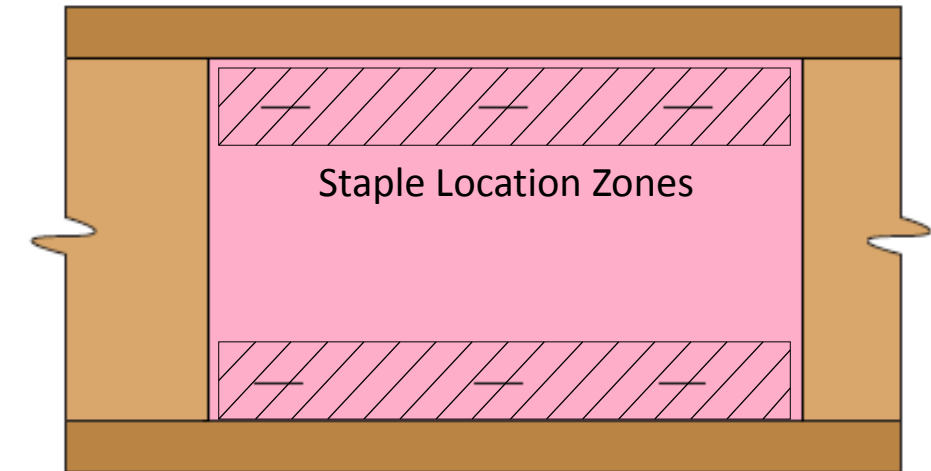

WebSHIELD Panels must be attached on both sides of the I-joist OSB web section. Attach with six (6) ½" wide x ¾" long common construction staples*. Evenly space in two rows as shown above. Ensure that the PinkShield Coating is facing out/away from the I-joist web.

- 7/16" Wide Crown Staples may be substituted.
- Larger staples or fasteners may be substituted.

Installation Notes & Helpful Hints

- ▶ WEBshields can be installed on coated and uncoated Pinkwood i-joists. (Series Include PKI, FRA and FRB)
- ▶ WEBshield spacing may be increased (see allowable shift) to allow for easier penetrations. (30" gaps for PKI-10, PKI-20, PKI-23 and 36" gaps for PKI-35 plus, PKI-40 and PKI-50)
- ▶ Traditional I-joist penetrations are allowed in the un-protected web sections of the joist. Verify location with software/literature prior to cutting.
- ▶ Avoid penetrating WEBshields when possible.
- ▶ If the WEBshield is penetrated, attach additional WEBshield material equal to the hole size. (6" hole = 6" wide additional WEBshield applied to the I-joist web closest to the hole penetration)
- ▶ Penetrations through WEBshields must not exceed 6" diameter. Holes larger than 6" must be evaluated by a state licensed engineer.
- ▶ Staples may be tilted, rotated or angled to avoid opposing staples.